

Quick Start Guide for Evaluation & Programming Tool

Step 1: Inspect contents	 Interface Board with white plastic target-holder* Codewheels or scales or a gear* Encoders on encoder-holder with cable and connector USB-cable * In the case of a gear, the Interface Board is supplied without white plastic target-holder 	
Step 2: Operate	a) Connect Interface Board to a USB power sourceb) Place the encoder in front of the codewheel or scale	

without PC software

- c) Move the codewheel or scale and observe the A quad B output signals on the Signal LEDs
- d) Use the START/STOP button to toggle the encoder on/off

Step 3: Install software

Download the ASSIST software from <u>www.posic.com/download</u> or from «My Downloadable Products» in your POSIC-account.

Install the ASSIST software according to the Installation Guide.





Detailed information about measurements with a reference encoder, linearization, debug and troubleshooting can be found in the ASSIST User Manual, which can be downloaded from POSIC's website.